



Meaning of crossed -out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.



Contact you local government for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.


When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.

RS Components Ltd
PO Box 99
Corby
Northants
NN17 9RS
Tel: 08457 201201



FAN HEATER

USER INSTRUCTIONS

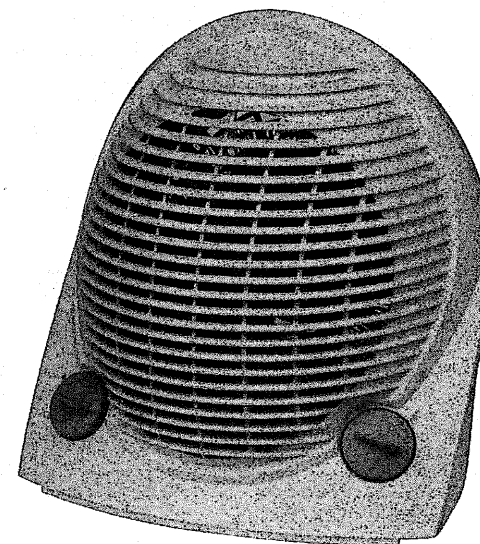

FH-502

220-240V~ 50Hz 1800-2100W

FOR YOUR OWN SAFETY

Read all instructions before using the fan heater.

1. Read all instructions before using the fan heater.
2. Only connect the fan heater to a single-phase socket with a main voltage as specified on the rating plate.
3. This appliance meets the electromagnetic compatibility requirements specified in EN 55104/95 with regard to interference with radio and TV sets.
4. Do not leave your home while the appliance is in function: ensure that the switch is in OFF (0) position and the thermostat is in minimum position. Always unplug the appliance when not in use.
5. Keep combustible material such as furniture, cushions, bedding, paper, clothes, curtains etc. at least 100cm away from the fan heater.
6. Do not hang anything on or in front of the fan heater.
7. Always unplug the heater when not in use. Do not pull the cord to unplug the heater.
8. Keep the air inlet and outlet free from objects: at least 1 m in front and 50 cm behind the heater.
9. Do not install the heater right below a socket.
10. Do not let animals or children touch or play with the fan heater. Pay attention! The air outlet gets hot during operation (more than 80°C, or 175 F).
11. Do not cover. If covered, there is the risk of overheating or even fire.
12. Do not use this fan heater in the immediate surroundings of a bath, a shower or a swimming pool.
13. Do not use the fan heater in the rooms with explosive gas or while using inflammable solvents, varnish or glue.
14. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
15. Keep the fan heater clean. Do not allow any objects to enter any ventilation or exhaust opening as this may cause electric shock, fire or damage to the heater.
16. Store in a cool dry place when not in use.
17. The appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
18. The appliance is not intended for use by young children or infirm persons without supervision.
19. Young children should be supervised to ensure that they do not play with the appliance.

OPERATION OF THE HEATER

NOTE:- It is normal when the heaters are turned on for the first time or when they are turned on after having not been used for a long period of time the heaters may emit some smell and fumes. This will disappear when the heater has been on a short while.

INSTALLATION

The appliance requires no installation. It should be used solely as a portable appliance.

Portable appliances are not suitable for use in a bathroom.

OPERATION

- Turn the thermostat knob (*left*) in a clockwise direction until it reaches the maximum setting.
- **Summer service (ventilation only):** turn the switch (*right*) to setting .
- **Heating at mid power:** turn the switch (*right*) to setting **1** (1000W).
- **Heating at full power:** turn the switch (*right*) to setting **2** (2000W).
- **Switching off:** turn the switch (*right*) to setting **0**.

REGULATING THE THERMOSTAT

When the room has reached the required temperature turn the left thermostat knob slowly in an

anti-clockwise direction up to the point where the appliance switches off and not beyond. The temperature fixed in this way will be automatically regulated and kept at a constant level by the thermostat.

CLEANING AND MAINTENANCE

Before cleaning always remove the plug from the electrical socket.

Clean the air inlet / outlet grilles frequently.

Never use abrasive powders or solvents.

WARNINGS

- Do not use the appliance in the vicinity of showers, bath tubs, wash basins, swimming pools, etc.
- Always use the heater in an upright position.
- Do not use outdoors. This product is for household use only.
- Do not use the heater to dry your laundry. Never obstruct the intake and outlet grilles (danger of overheating).
- The heater must be positioned at least 50 cm from furniture or other objects.
- When the appliance is used in portable version, do not place it up against walls, furniture, furniture, curtains, etc.
- The appliance must be installed so that the switches and other controls can not be reached by persons using the bath tub or the shower.
- This appliance comes with a Y-type connection. Replacement of the feed cable must be entrusted only a qualified technician because such work requires special tools.
- The appliance must not be positioned directly underneath a fixed power point.
- Do not use the appliance while it is functioning in order to avoid overheating with the attendant risk of fire.
- Do not use the appliance in rooms less than 4m² area.

WARNING: in order to avoid overheating, do not cover the heater!

The heater is fitted with a **safety device** which will switch off the heater in case of **accidental overheating** (e.g. obstruction of air intake and outlet grilles, motor turning slowly or not at all). To reset, disconnect the plug from the power for a few minutes, remove the cause of overheating then plug the appliance in again. If it still cannot be reset, ask a qualified technician to check and/or repair.

